


Color of wires

Colored wires as shown in the following table are used.
When two colors are used in a wire, the designation of the wire is as follows;

Example: 1.25RG

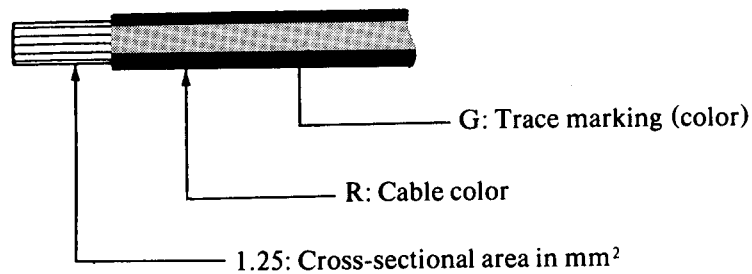

Y16B04

NOTES

1. When cross-sectional area is not indicated, the area is 0.5 mm².
2. Cross-sectional area, indicated by () in cable color, is 0.3 mm².
3. On some instruments, the lead wire may be of different color from those of wiring harness.


Color of wire	Code	Circuit
Black	B	Starting, Grounding
White	W	Charging
Red	R	Lighting
Yellow	Y	Gauge, Indicator
Green	G	Signal
Brown	Br	Others
Blue	L	Others
Light green	Lg	Others
Grey	Gr	Others
Orange	O	Others




35556B05
35556B07-N
35556B0U-N


Wiring Diagram

1986 model CONQUEST

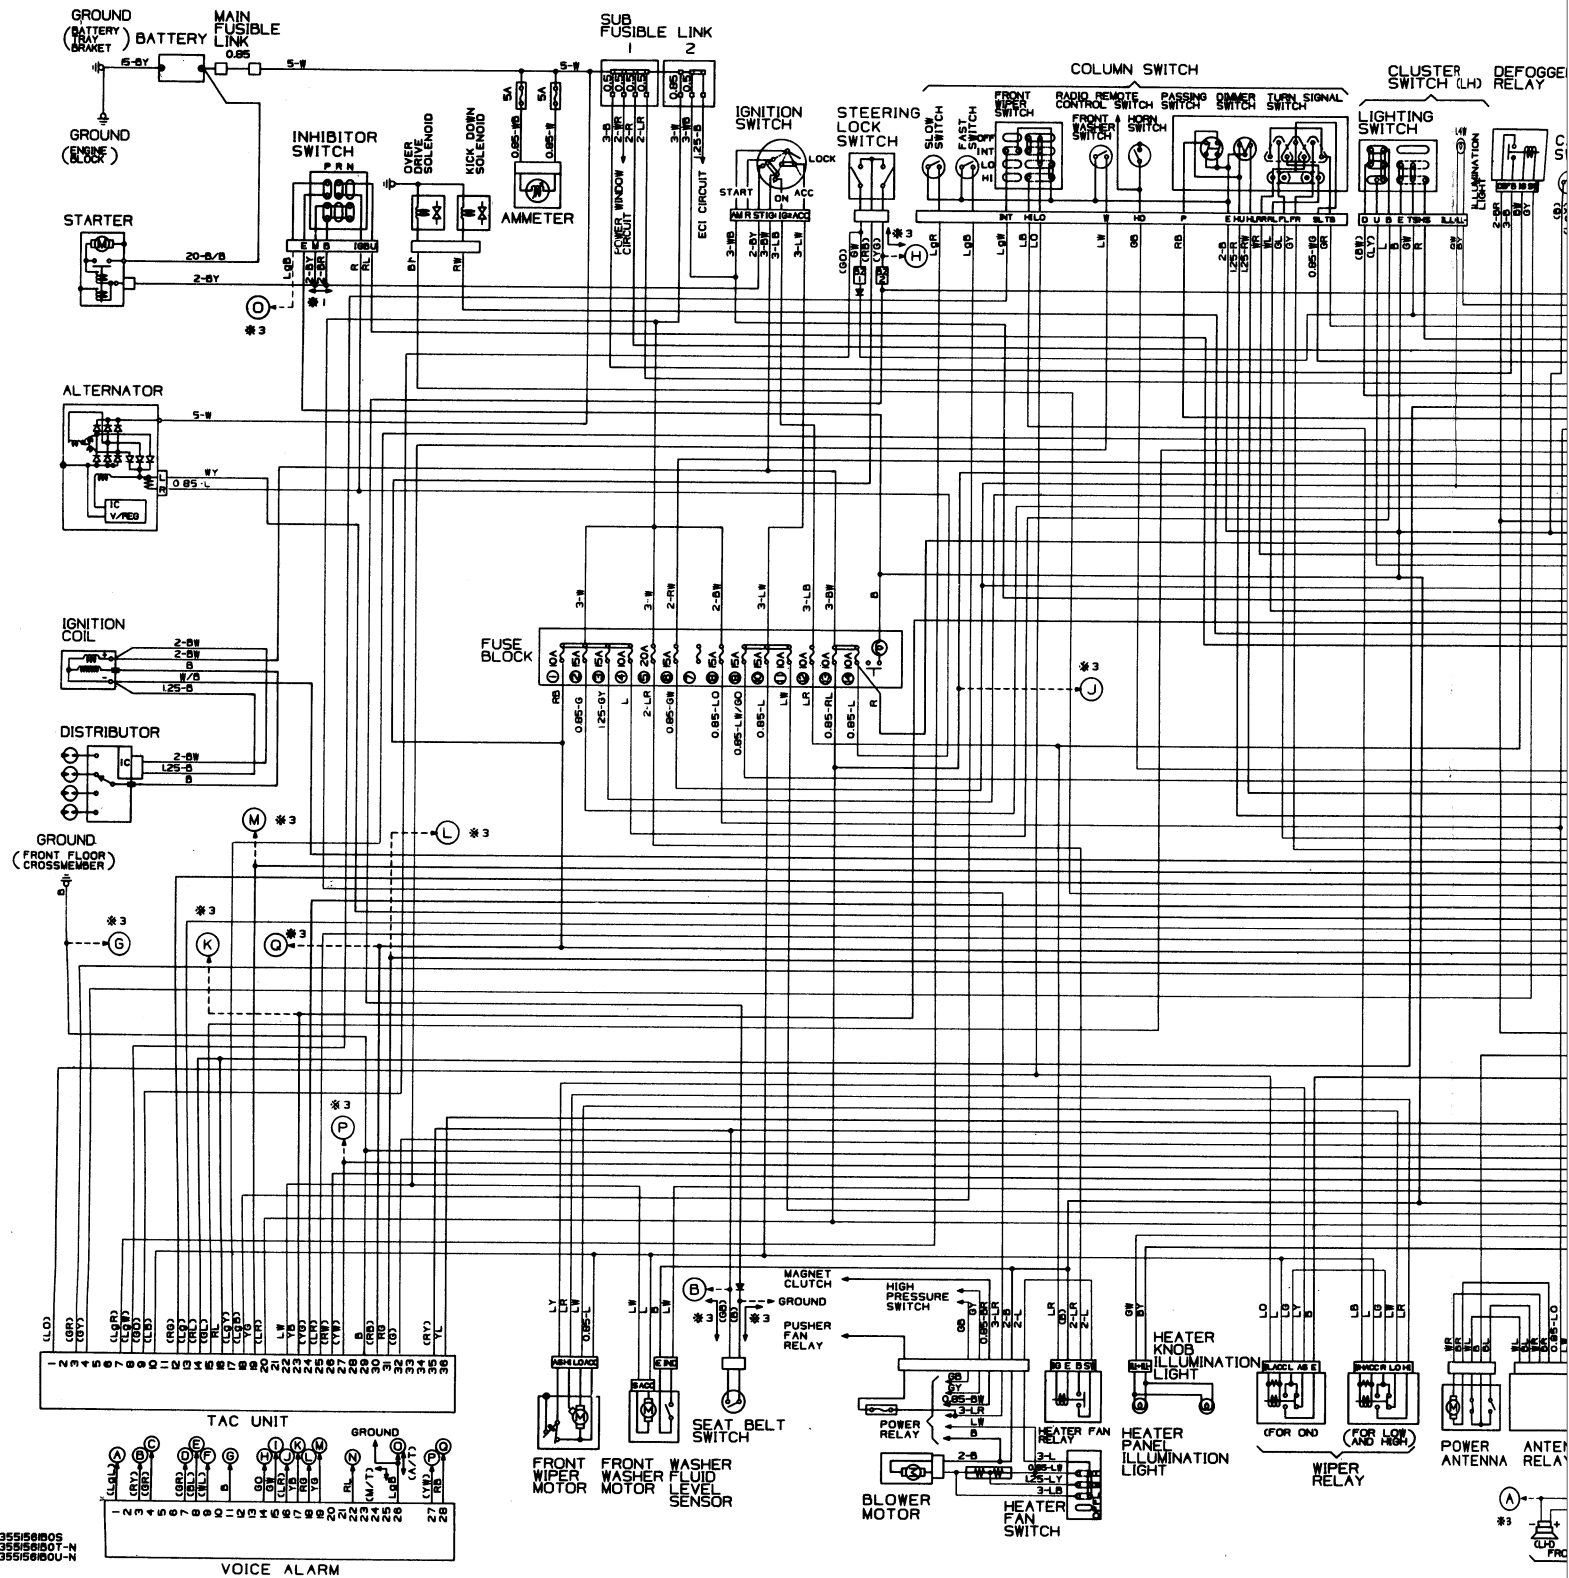

35515810S
35515810T-N
35515810U-N

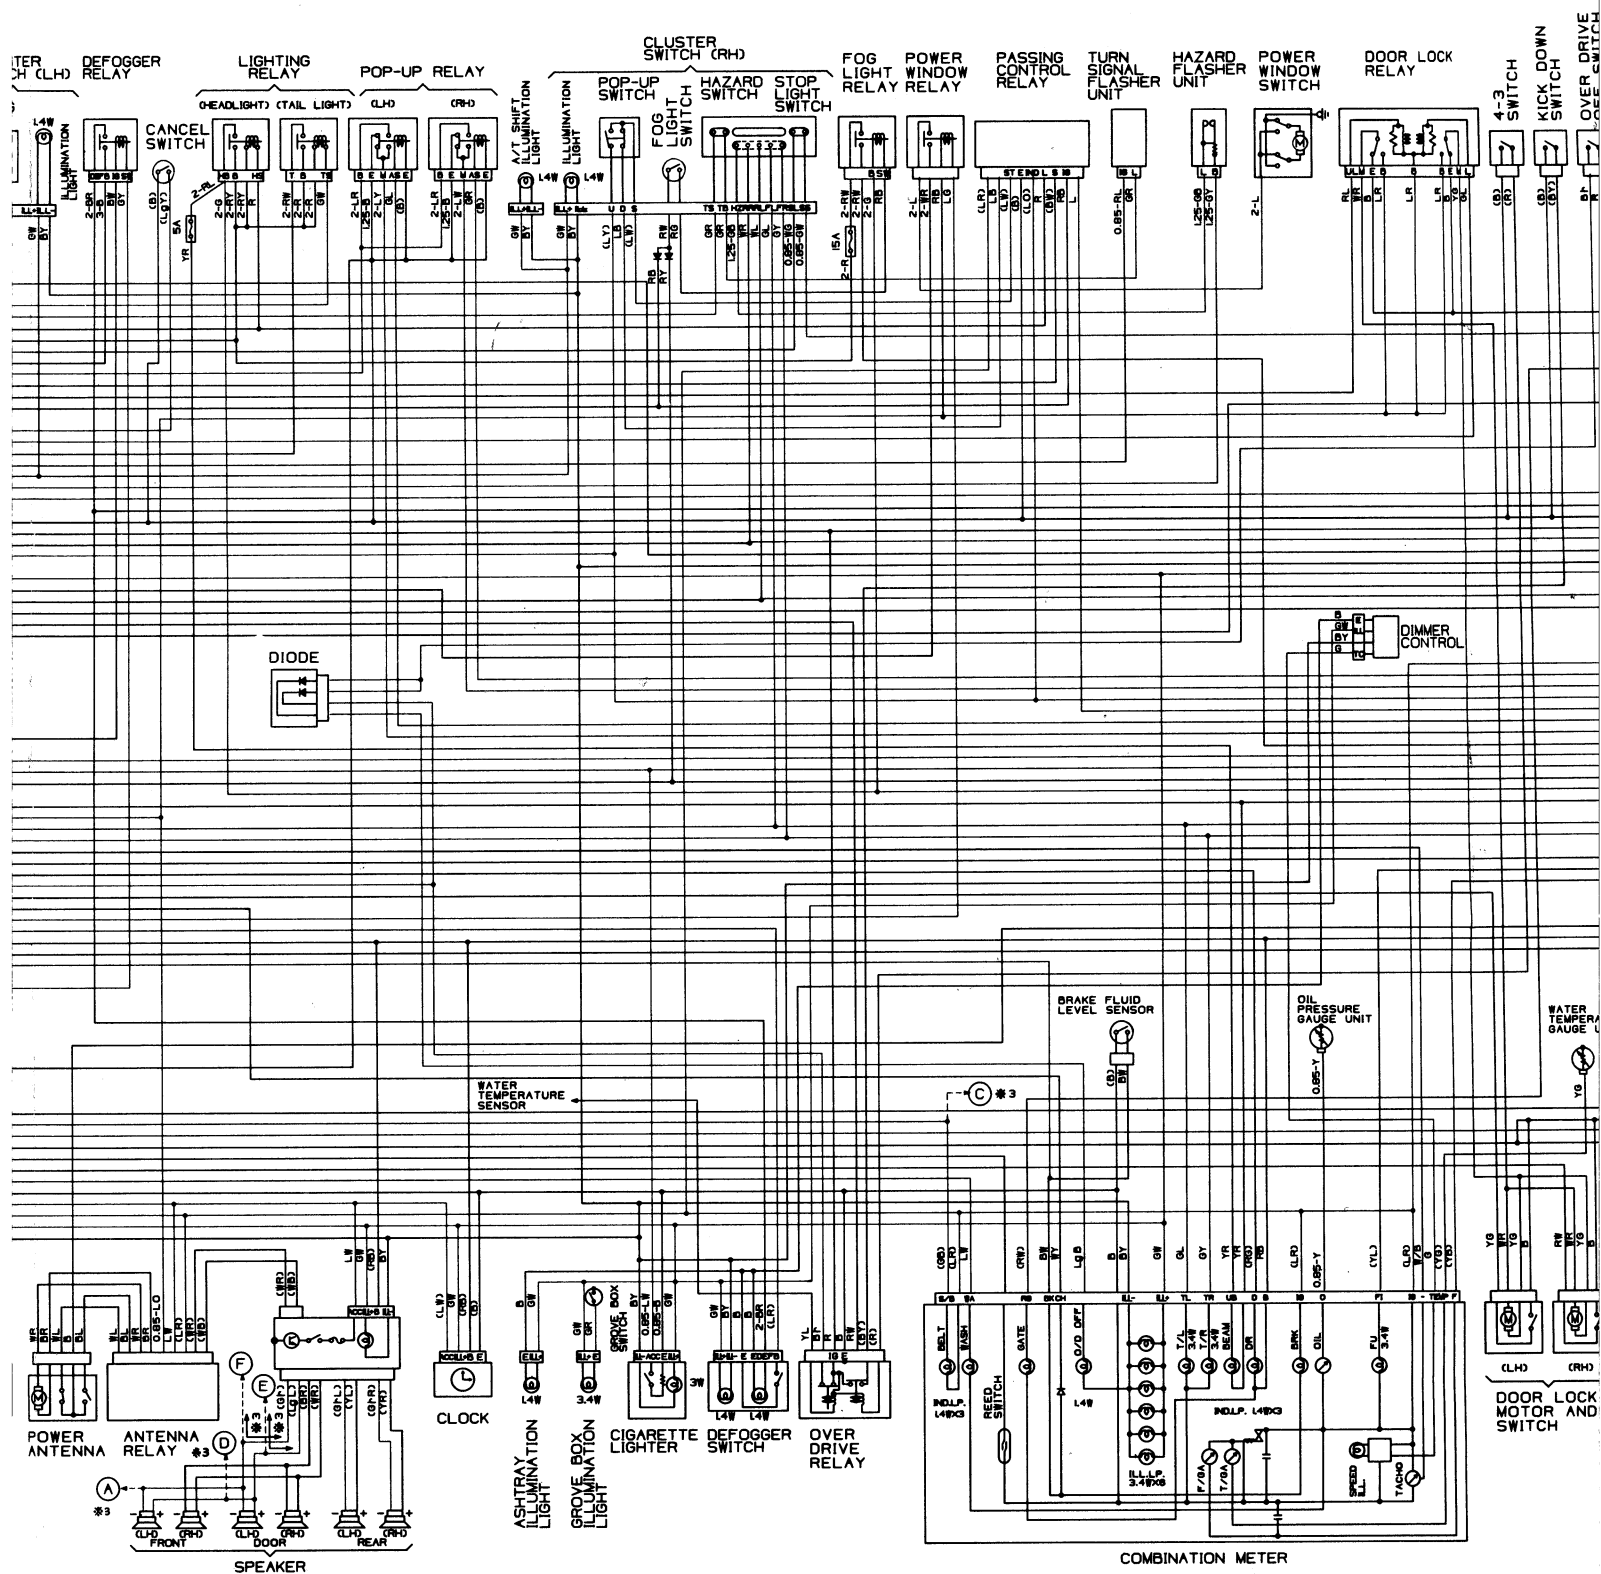

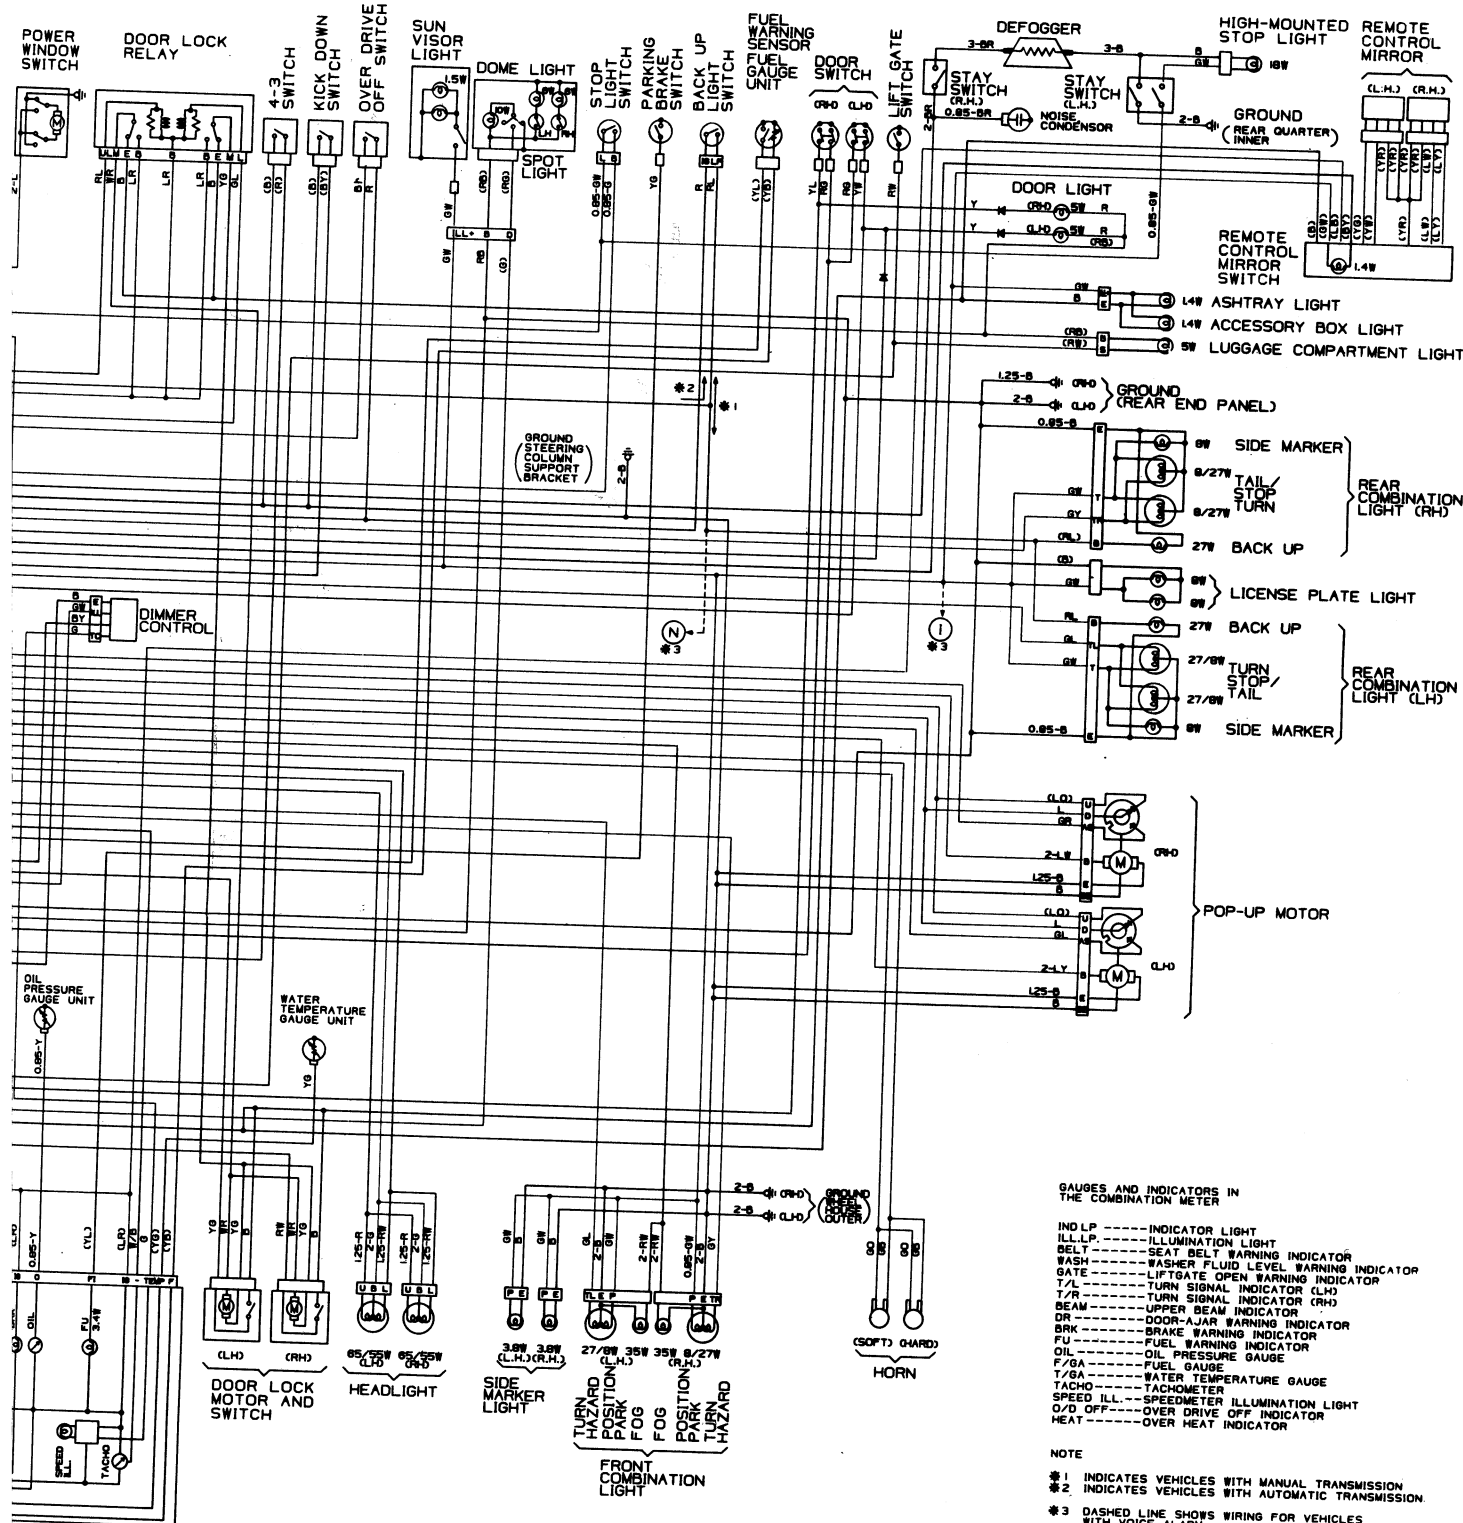


- GAUGES AND INDICATORS IN THE COMBINATION METER**
- IND LP ----- INDICATOR LIGHT
 - ILL LP ----- ILLUMINATION LIGHT
 - BELT ----- SEAT BELT WARNING INDICATOR
 - WASH ----- WASHER FLUID LEVEL WARNING INDICATOR
 - GATE ----- LIFTGATE OPEN WARNING INDICATOR
 - T/L ----- TURN SIGNAL INDICATOR (LH)
 - T/R ----- TURN SIGNAL INDICATOR (RH)
 - BEAM ----- UPPER BEAM INDICATOR
 - DR ----- DOOR-AJAR WARNING INDICATOR
 - BRK ----- BRAKE WARNING INDICATOR
 - FU ----- FUEL WARNING INDICATOR
 - OIL ----- OIL PRESSURE GAUGE
 - F/GA ----- FUEL GAUGE
 - T/GA ----- WATER TEMPERATURE GAUGE
 - TACHO ----- TACHOMETER
 - SPEED ILL. ----- SPEEDMETER ILLUMINATION LIGHT
 - O/D OFF ----- OVER DRIVE OFF INDICATOR
 - HEAT ----- OVER HEAT INDICATOR

NOTE

- *1 INDICATES VEHICLES WITH MANUAL TRANSMISSION
- *2 INDICATES VEHICLES WITH AUTOMATIC TRANSMISSION
- *3 DASHED LINE SHOWS WIRING FOR VEHICLES WITH VOICE ALARM.

Components Wiring Diagram

ECI-Turbo

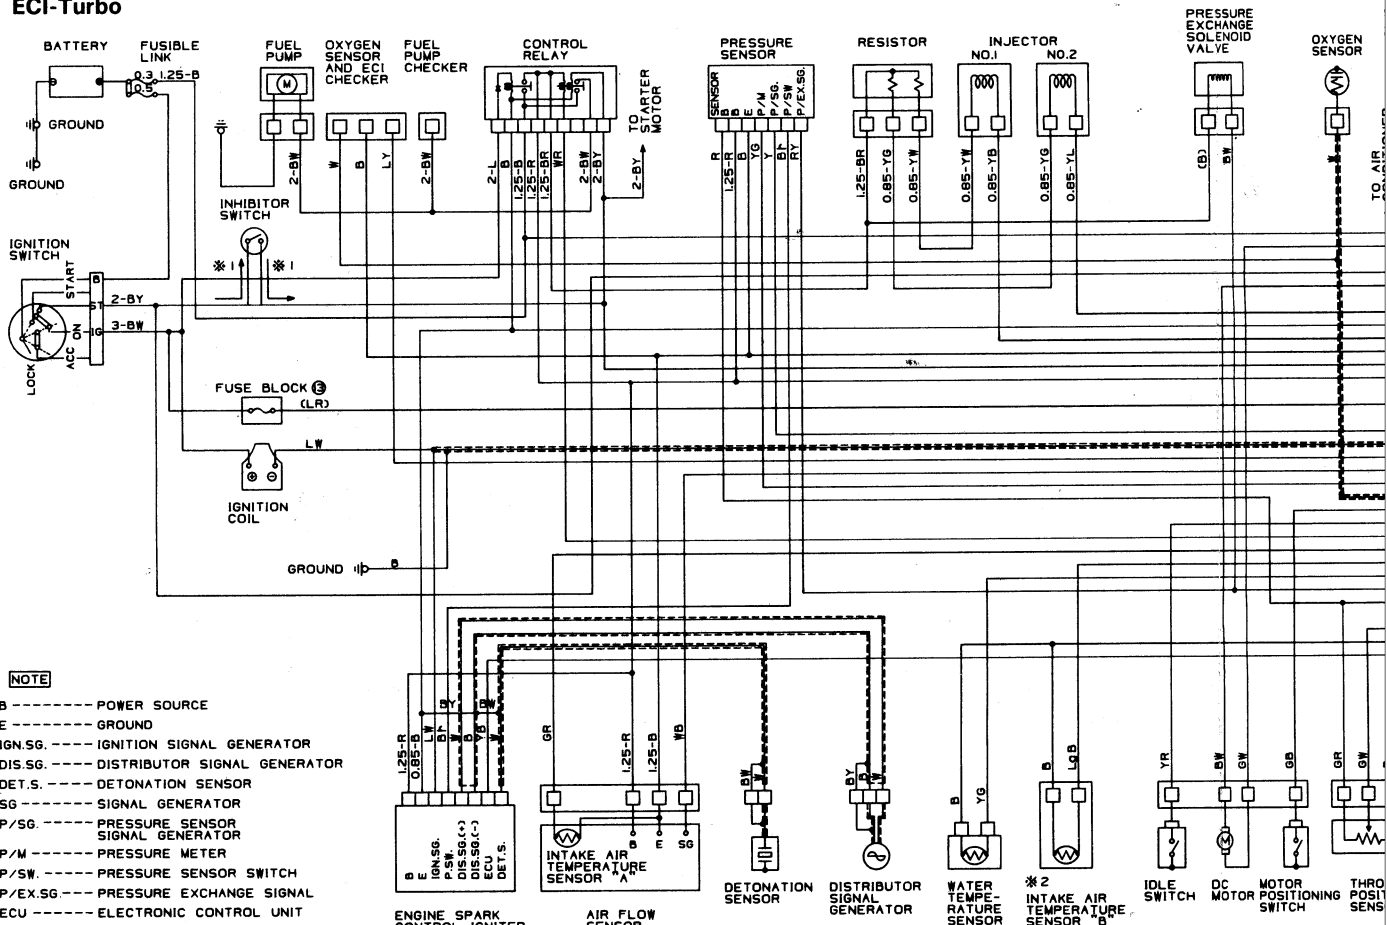



NOTE


- B ----- POWER SOURCE
- E ----- GROUND
- IGN.SG. ----- IGNITION SIGNAL GENERATOR
- DIS.SG. ----- DISTRIBUTOR SIGNAL GENERATOR
- DET.S. ----- DETONATION SENSOR
- SG ----- SIGNAL GENERATOR
- P/SG. ----- PRESSURE SENSOR SIGNAL GENERATOR
- P/M ----- PRESSURE METER
- P/SW. ----- PRESSURE SENSOR SWITCH
- P/EX.SG. ----- PRESSURE EXCHANGE SIGNAL
- ECU ----- ELECTRONIC CONTROL UNIT



* 1 INDICATES VEHICLES WITH AN AUTOMATIC TRANSMISSION.
 * 2 INDICATES VEHICLES WITH AN INTERCOOLER.

355156/B35

Auto Air-Conditioning

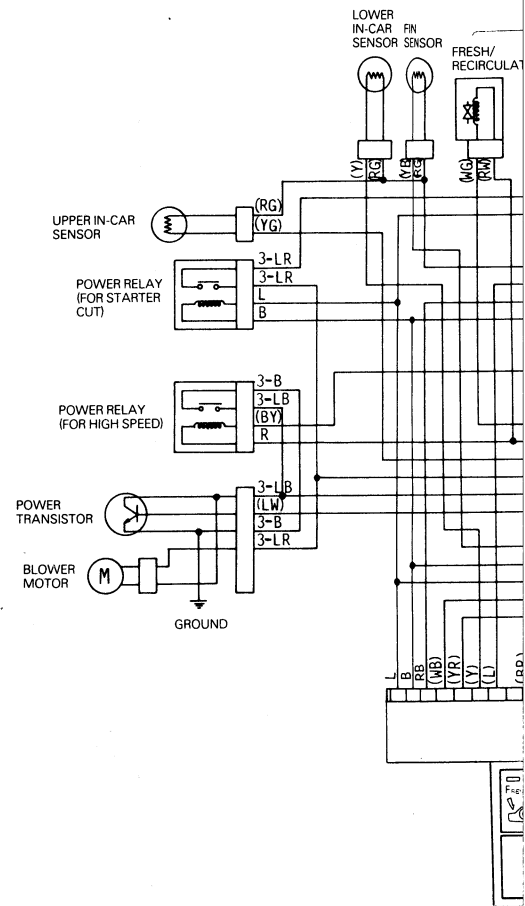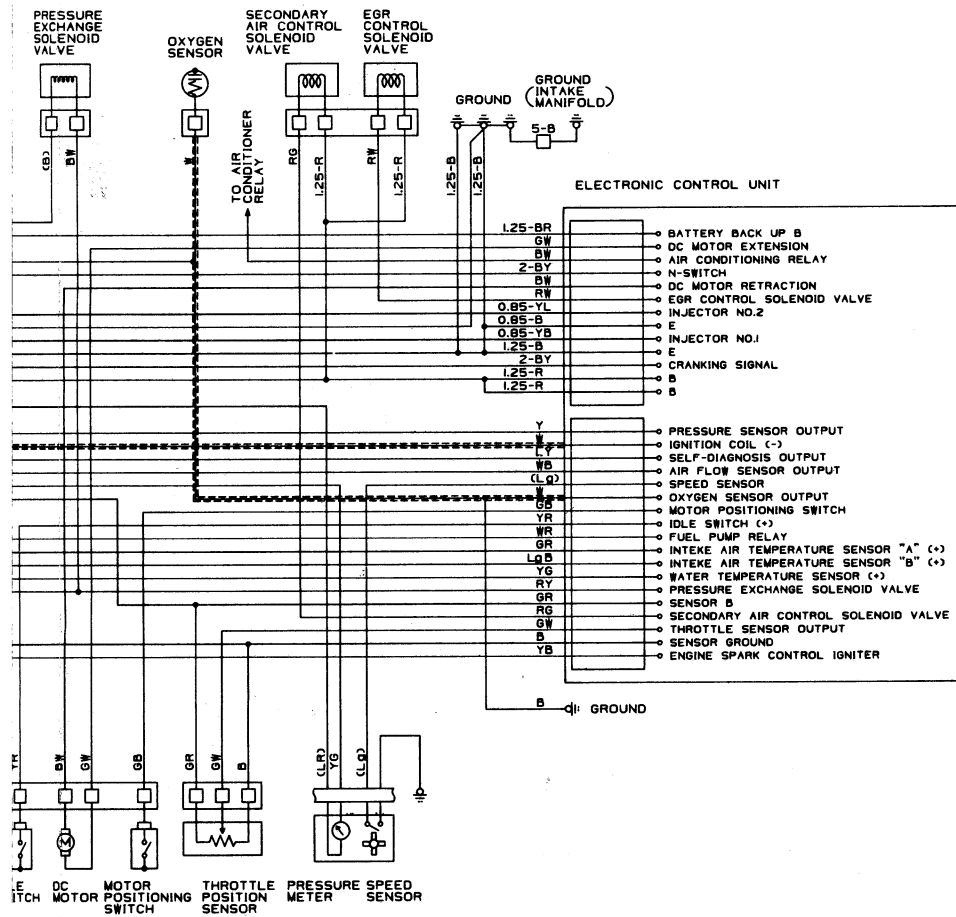


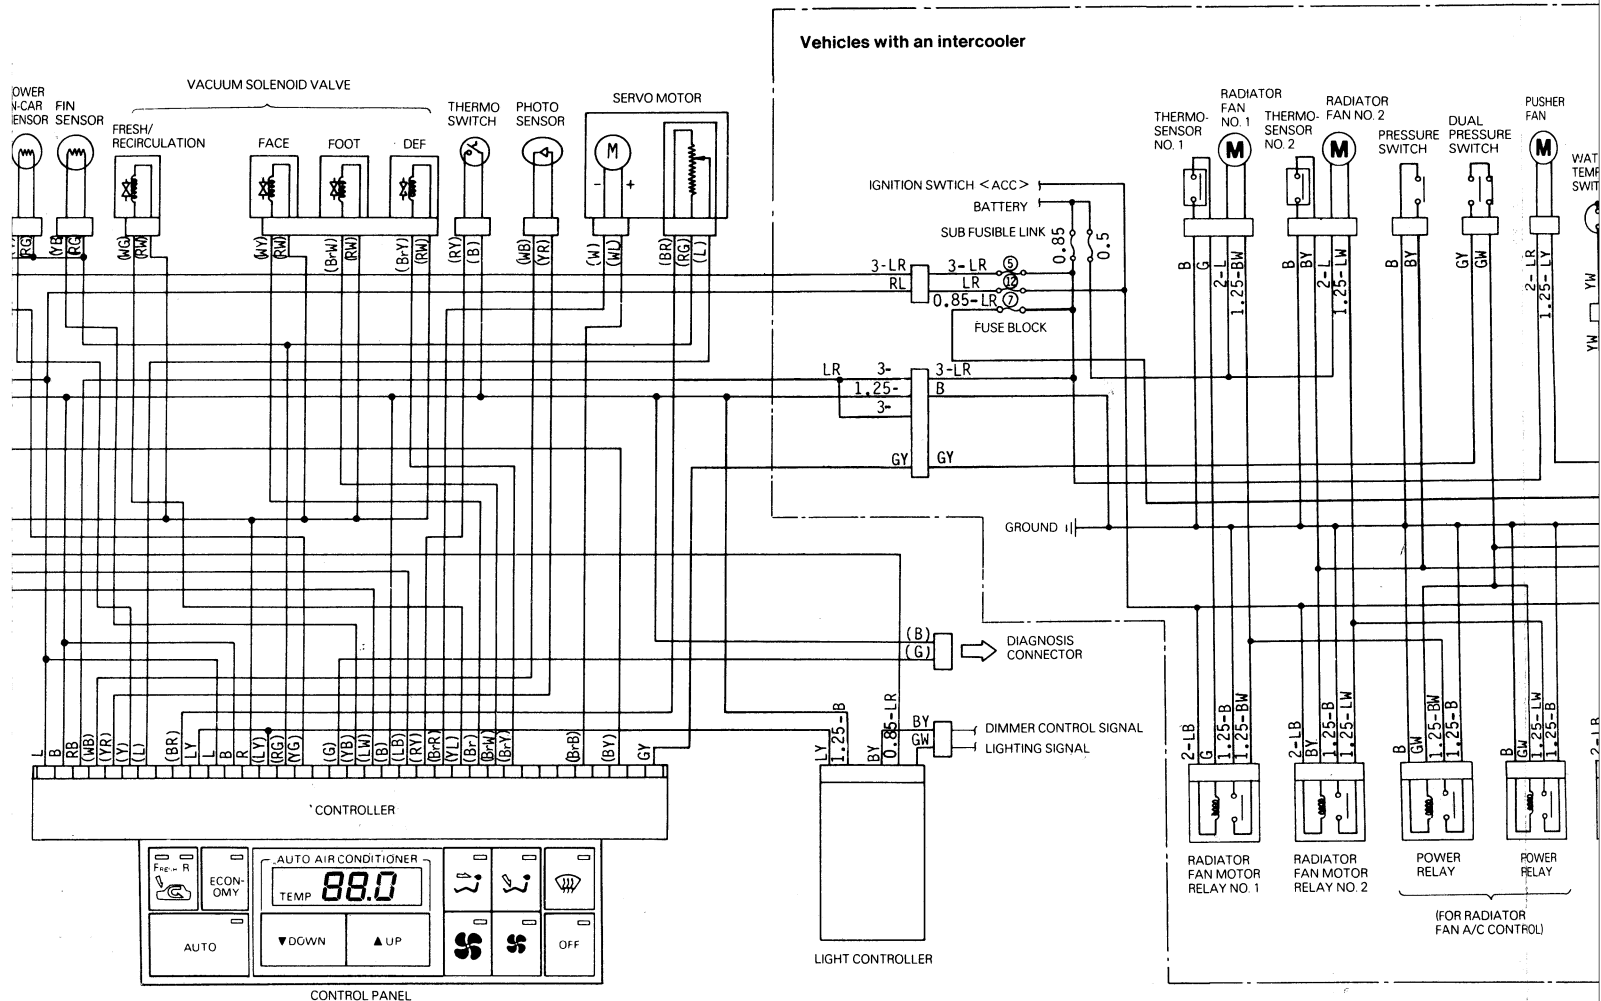

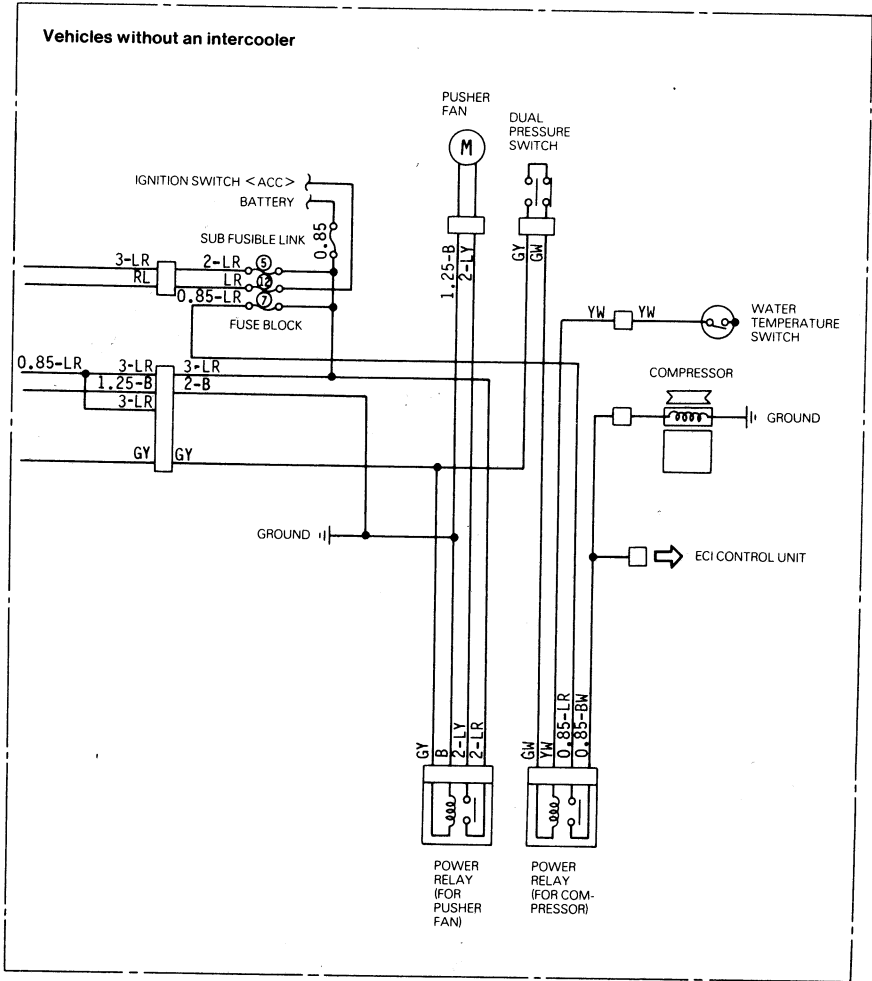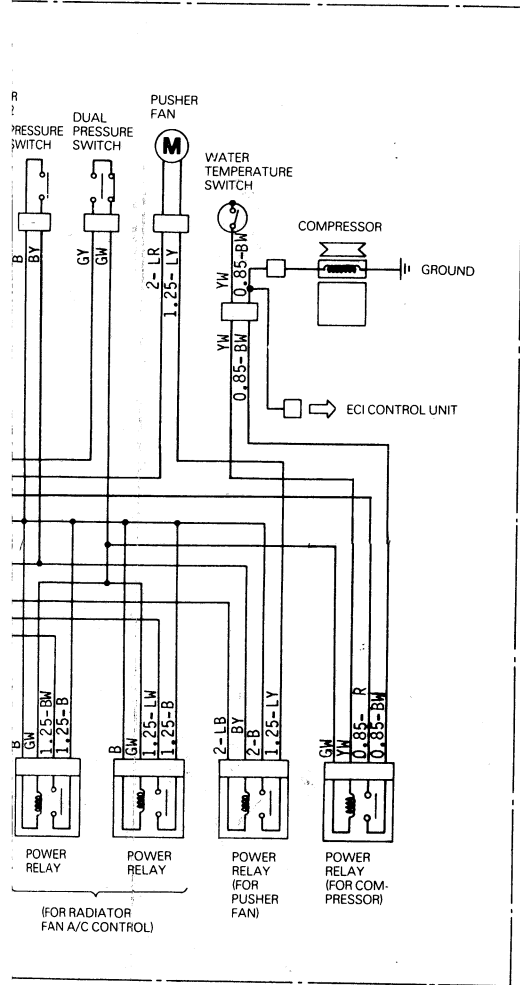


Components Wiring Diagram

ELECTRONIC LIQUID CRYSTAL DISPLAY METER CIRCUIT

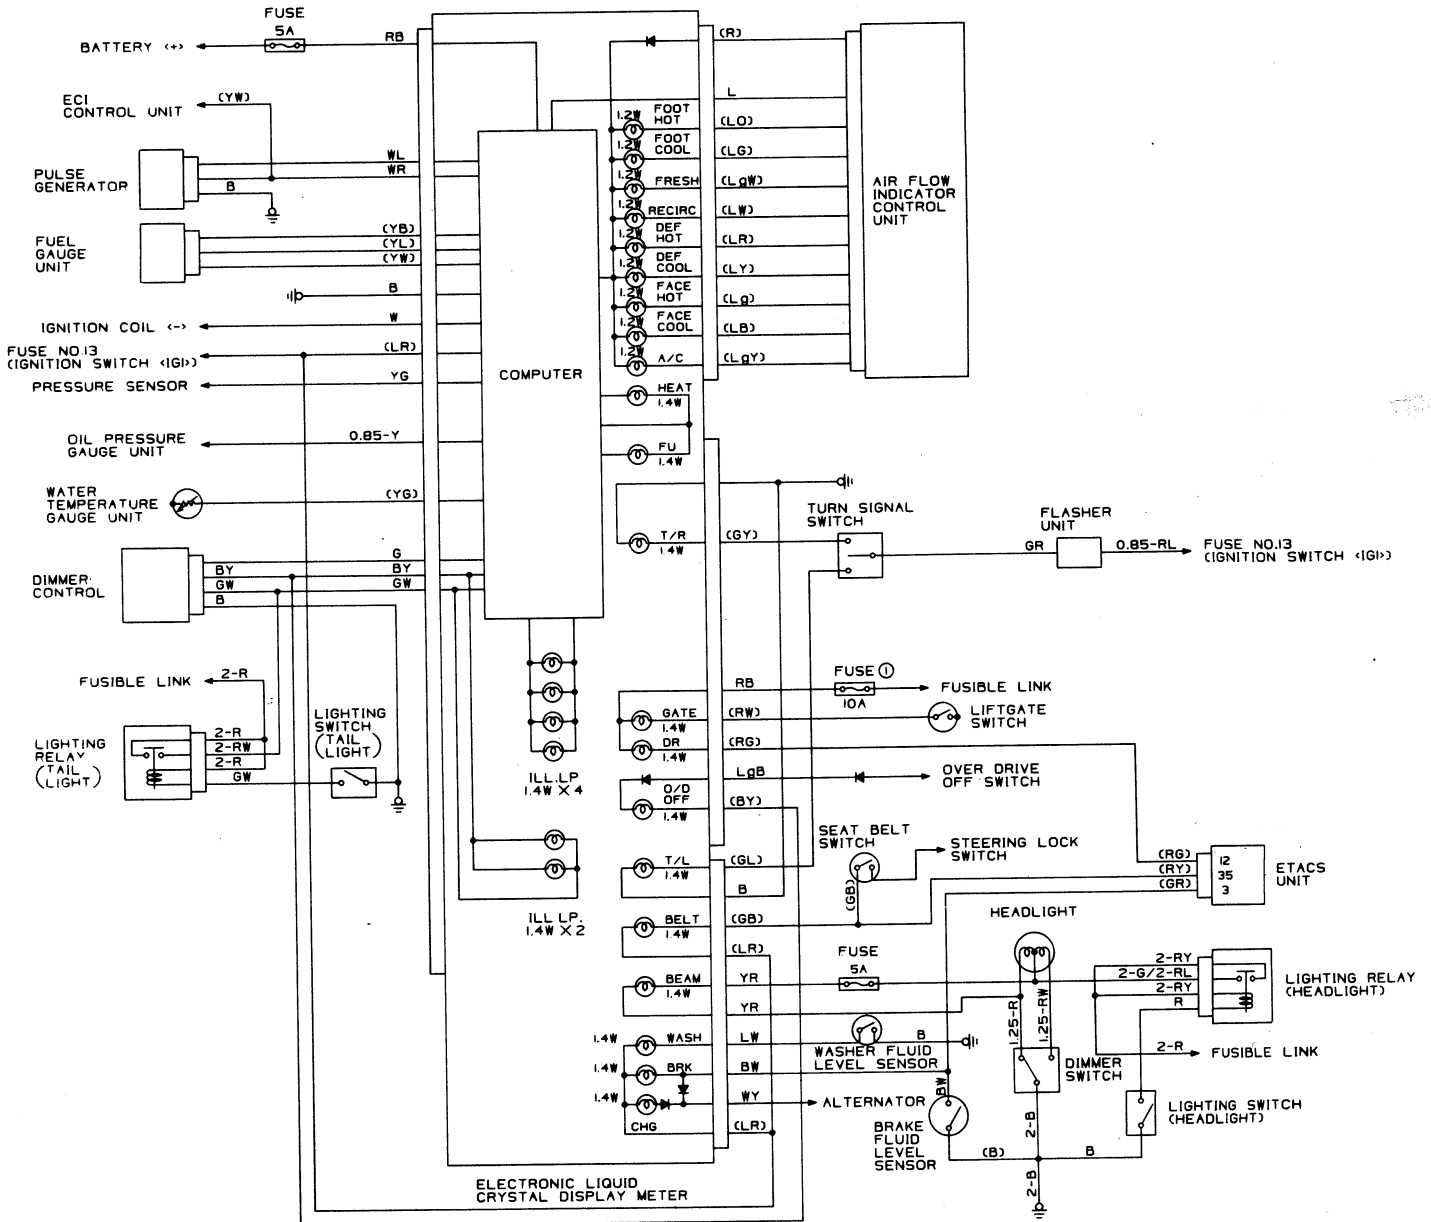


3551561M5


SPEED CONTROL SYSTEM CIRCUIT

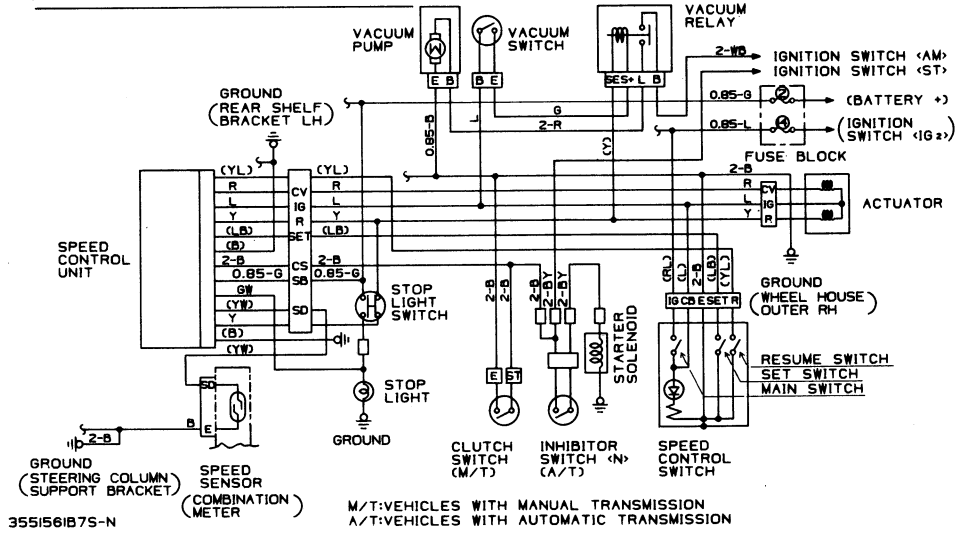


REAR WIPER AND WASHER CIRCUIT

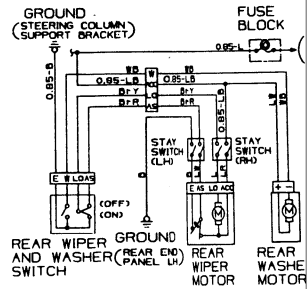

REAR BRAKE LOCK-UP CONTROL SYSTEM CIRCUIT

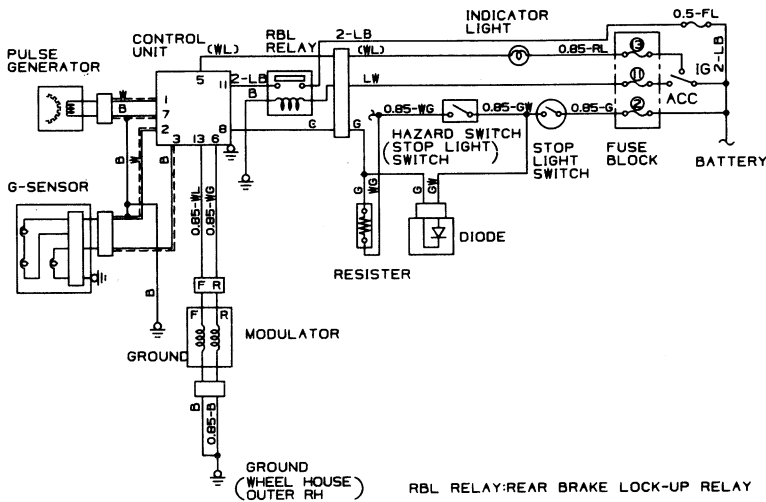


RADIO REMOTE CONTROL

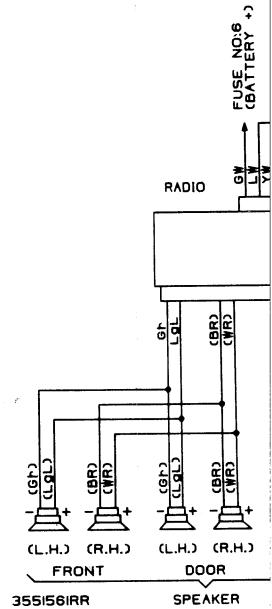


10.13
ON SWITCH (IG2)

ETACS
UNIT
LIGHTING RELAY
(HEADLIGHT)
E LINK
ITCH

REAR WIPER AND WASHER CIRCUIT

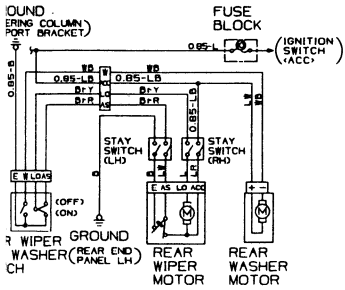


ELECTRICAL RADIATOR FAN CIRCUIT

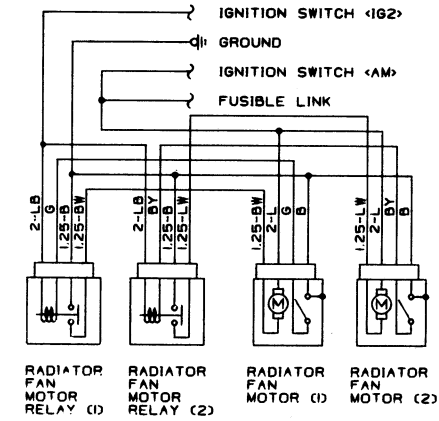

3551561ER

RADIO REMOTE CONTROL CIRCUIT

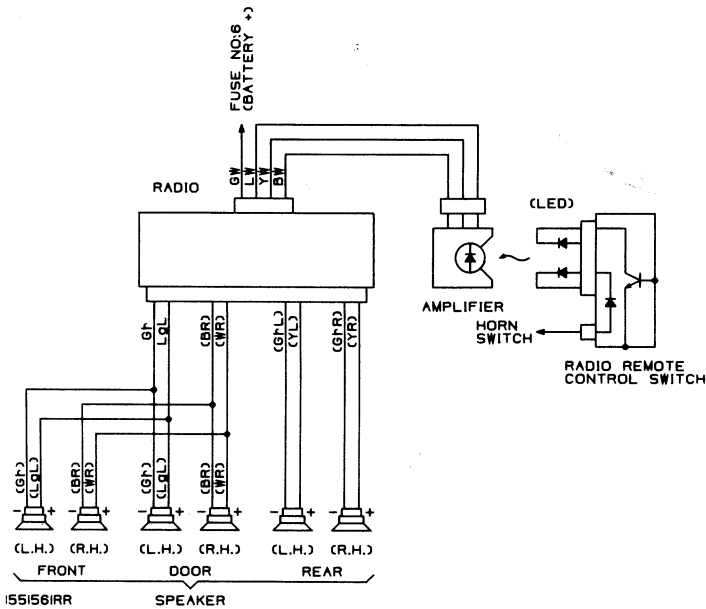

1551561RR